

WEIL
INSTALLATION
OPERATION
MAINTENANCE


B200-61
 5-11-06

2100
 2200

VERTICAL SEWAGE PUMPS

OWNERS INFORMATION

Manufacturer's Number	Date Code
W-2224-11	476.542 B05
PUMP 2224 L90 DISCH 4 X 45 ANSI IMP 600 IRON BASIN DEPTH 8 FT 0 IN	
WEIL PUMP CEDARBURG WI 53012	

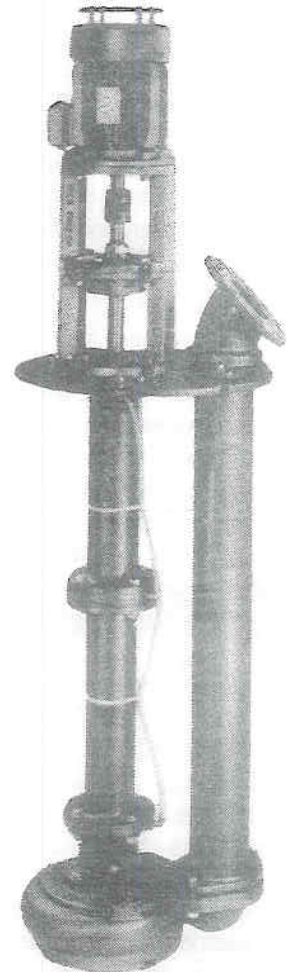

INTRODUCTION

This manual contains instructions for installation, operation and maintenance of your pump equipment. Read and study this manual before using the equipment.


The pump is a well designed and sturdily constructed machine. When properly installed and given reasonable care and maintenance, it will give many years of service.

SAFETY PRECAUTIONS

Always disconnect the electrical power supply to the motor before working on the unit. Failure to do so can cause severe electrical shock or death. If basement floor is wet or flooded, do not walk on floor until the electrical power has been disconnected. If necessary, call the power company to disconnect the power. Exercise caution when working in the exposed areas of rotating parts.

RECEIVING

Immediately upon
 checked

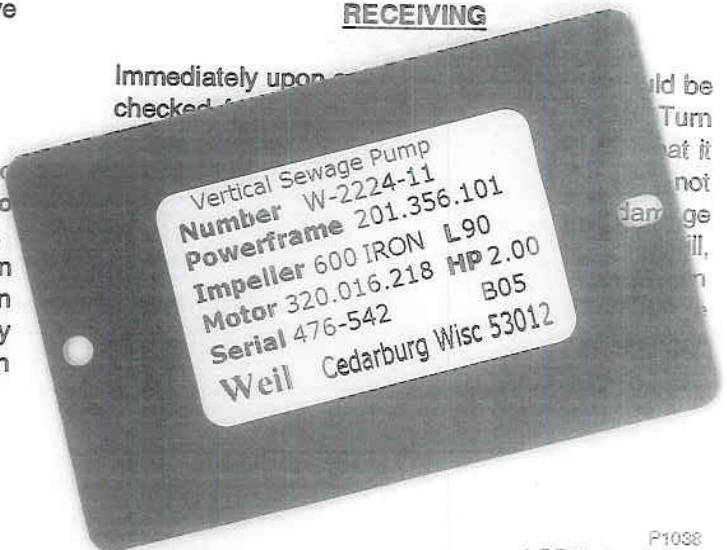

C W102.109.02

2100 2200

VERTICAL SEWAGE PUMPS

P1038
 APRIL 1, 1997

WEIL

REVISIONS: 4/18/66 A.D.J.M.H.

WEIL PUMP CO.
CHICAGO, ILL.

DR. BY: T.M.A.
ENGR. BY: J.M.A.
APPROV. BY: J.M.A.
DATE: 2/18/55

INSTALLATION DIAGRAM OF TYPE 103/09 '55'
PUMP ELEVATORS WITH FLKPT. CONTROL.

PRINT NO. S-2126

